




## Parts explanation :

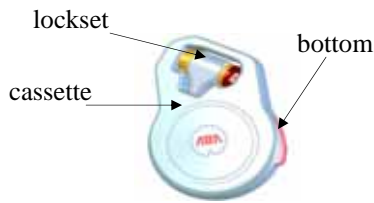

Parts name of cassette

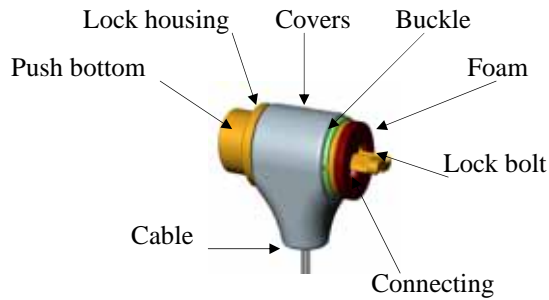

Parts name of lockset

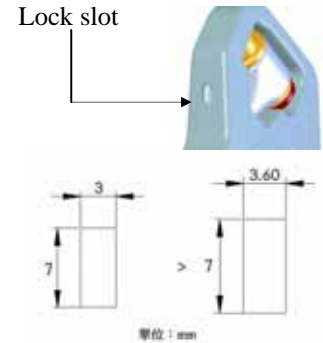

**Multi-Application:** A domestic LCD Television, Laptop, Projector....etc.

### Lock slot specification:


- (1) Apply to 7mm x 3mm ~ >7mm x 3.6mm (as drawing to the right)
- (2) An extra lock slot located in a side of lock cassette.

**NOTE:** Please make sure the application slot is suitable for above mentioned lock slot specification in case of any damage caused.

### Locking steps.

#### (1) Cable around the immovable article:

Find out a lock hole (if not, find a flat area) -> press the button (1) + pull out the lockset (2). -> Before insert the end of application slot, the cable should be around the immovable article and cross through the fitting hole of lock cassette (3). (P. 1)

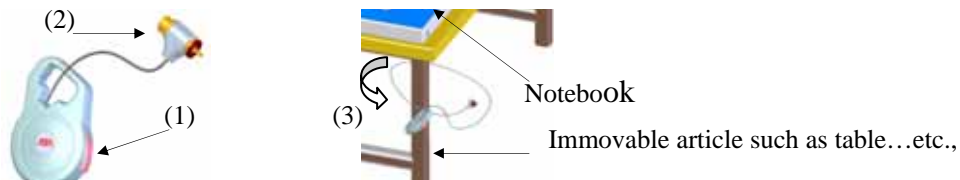

P.1

#### (2) Unlocked modes:

P.2 : Push bottom protrudes the lock barrel is un-locked.


P.3 : Push bottom stays in the lock barrel is locked.

P.4 : If push bottom stays locked, before insert in the end of application slot, you need to:

Holding the lock housing or lock buckle -> holding key handle -> insert key to the end and rotate the key to unlock the lockset-> push bottom released (lock bottom jump out automatically.) -> Make a left turn -> withdraw key from the lockset-> unlock. (see P.2)


**IMPORTANT:** when you try to release the push bottom if your hand do not hold the lock housing or lock buckle, the key will keep doing idle-running in the lock barrel.

Push bottom protrudes the lock barrel in the meantime you could lock anything which is having 7mmx3mm~7mmx3.6mm lock slot.

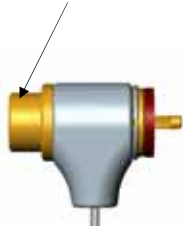


P.2. Unlocked mode

Push bottom has been pushed down, no way to push in again.

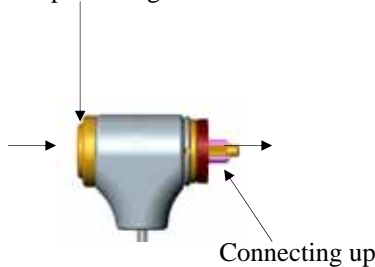

P.3. Locked mode

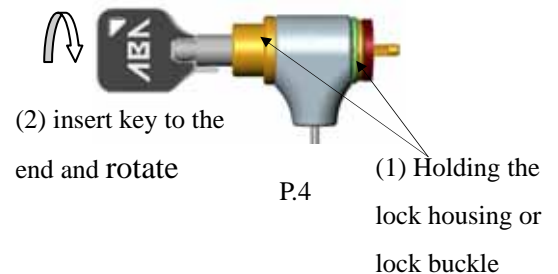


P.4


### How to lock:

**Way 1:** When the lock bolt insert in the application slot, in the mean time the foam is surrounding the slot of application -> shake the lockset slightly -> push down the lock button-> locked. (see blew P.5and P.6 ).

**Way 2:** Pull out the lock set -> find an immovable article -> the cable should be around the immovable article -> lock bolt insert in the cassette slot (It located in a side of lock cassette) -> locked. (see blow P.7and P.8).

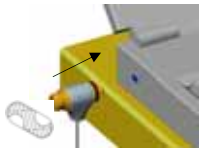

P.5

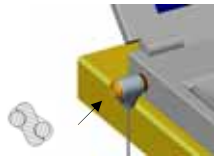

P.6



P.7




P.8

### Unlocking steps:

- (1) Use the key to unlock the lockset : Inserting key -> make a right turn -> lock button jump out automatically.
- (2) Withdraw key : Make a left turn -> withdraw key from the lockset.
- (3) Take out the lockset : Shake the lockset slightly -> withdraw lockset.
- (4) Release cable : Release the lock cable-> unlocked.

### The ways of restore lockset:


- (1) Lockset stays unlock position -> push the bottom of cassette lead the cable line retract automatically. (In case of any injury from speed retraction by mechanism; it is better if you hold the lockset by another hand to slow down the retraction speed)
- (2) Find out lockset storage hole and a small concave. (See drawing P.9)  
→ Put the lock bolt into the small concave and follow the direction of arrowhead to store the lockset (see drawing P.10)  
\*\* If the methods of storage are correct, the lockset should be placed appropriate in the storage hole. (See drawing P.11)
- (3) Press the bottom again; make sure all cable line has been retracted well in the lock cassette. (See drawing P.12)

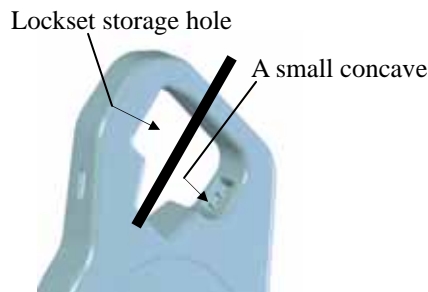


P.9



P.10

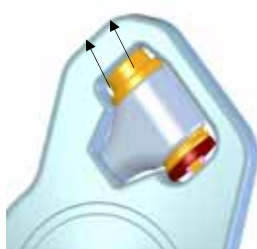

P.11

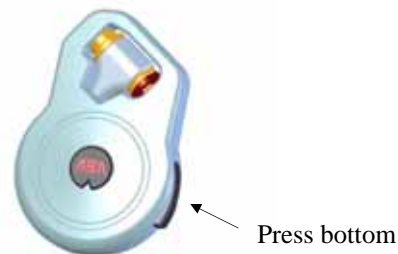

P.12